

USER MANUAL / MANUAL PËRDORIMI
BEDIENUNGSANLEITUNG / ПАСПОРТ НЗДЕПНЯ



EN Mounting instructions
DE Montageanleitung
RU Инструкция по монтажу

FR Instruction de montage
AL Udhëzimet e përdorimit
ESP Instrucciones de montaje

GR Συναρμολογησης
RO Instrucțiunile de montaj
BG Ръководство за монтаж

RS Uputstvo za montažu
UA Інструкція по монтажу
AR تعليمات التثبيت

MODEL NO	INPUT VOLTAGE(VAC)	POWER (W)	IP	WORK TEMPERATURE(°C)	WORK HUMIDITY(RH)	CCT
LT60-01010	200-240	10	IP65	-20°C/+40°C	<%93	4200K
LT60-01030	200-240	10	IP65	-20°C/+40°C	<%93	6400K
LT60-02010	200-240	20	IP65	-20°C/+40°C	<%93	4200K
LT60-02030	200-240	20	IP65	-20°C/+40°C	<%93	6400K
LT60-03010	200-240	30	IP65	-20°C/+40°C	<%93	4200K
LT60-03030	200-240	30	IP65	-20°C/+40°C	<%93	6400K
LT60-05010	200-240	50	IP65	-20°C/+40°C	<%93	4200K
LT60-05030	200-240	50	IP65	-20°C/+40°C	<%93	6400K
LT60-09110	200-240	100	IP65	-20°C/+40°C	<%93	4200K
LT60-09130	200-240	100	IP65	-20°C/+40°C	<%93	6400K

LED FLOODLIGHT INSTRUCTION

Specifications and Technical Data sheet:

Luminaire Category: LED Floodlight
Input voltage: AC230V 50HZ
Ambient Temperature: -40°C<TA<50°C









WARNING:

- 1.ENSURE ELECTRICITY IS SWITCHED OFF BEFORE INSTALL .
- 2.Please read through all following instructions before installing the unit.
- 3.User should prepare necessary accessories and spare parts (not provided) including junction box .
- 4.The Floodlight must be earthed.
- 5.Method of attachment of the cable or cord such that any replacement can only be made by the manufacturer, his service agent or similarly qualified person.

MOUNTING

- 1.Do not mount a surface prone to vibrations.
- 2.Remove the screw which is for mounting the bracket of the fixture. Remove the bracket.(see fig.1)
- 3.Mark the hole position for fixing bracket onto the wall. Drill the wall at the marked positions (screw not supplied). (see fig.2)
- 4.Screw the fixing bracket to the wall with suitable screw(see fig.3)
- 5.Mount the bracket back to the fixture. Adjust the floodlight to desired position and tighten the screw of fixing bracket(see fig.4)
- 6.Connect your mains cable(H05RN-F3G1.0mm2 Recommended) with the input lead of our product through the waterproof junction box. Note the Line(-) of the lead. (see fig.5) (Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw)
- 7.Open the power to make sure if the product can be lighten. Adjust the irradiation angle according to the condition of usage.(see fig.6)

Please operate it strictly according to the instruction, otherwise the consequence is proud.

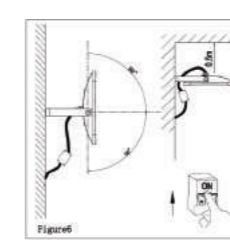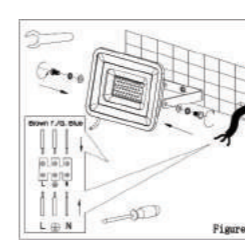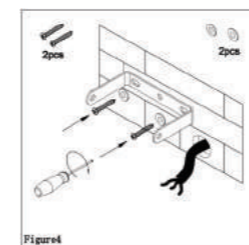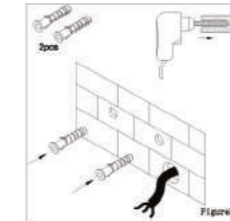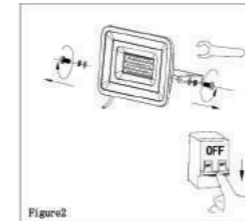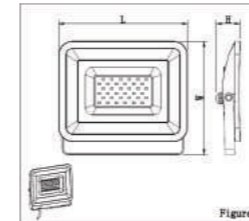

Please don't open our products by yourself, it may causes water leakage.The power of final interpretation belong to the manufacturer.

